

SEMI FLUSH SLITTING SAW HOLDERS

How to Remove End Cap

The end cap of the holder is held in place with an allen screw in the draw bar hole. Due to our tight OD and ID tolerances, you may have to tap the allen wrench after loosening a few turns to disengage the arbor and the end cap.

1



Insert allen wrench into taper and loosen draw bar screw.

2



Once screw is loosened, tap the allen wrench.

3



The end cap will pop off.