


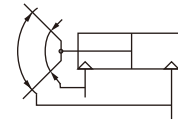

# Air gripper—HFR Series

## 180° open/close style



### Ordering code

**HFR 20** □



#### ① Model

HFR: 180°open/close air gripper

 
 
#### ② Bore size

10 16 20 25 32

#### ③ Mounting type

Blank: Mounting through tapped holes

N: Mounting through holes (tapped in open/close direction)



HFR series are all attached with magnet.

### Specification


Bore size (mm)	10	16	20	25	32
Acting type	Double acting				
Fluid	Air(to be filtered by 40μm filter element)				
Operating pressure	Φ10	29~100psi(0.2~0.7MPa)			
	Φ16~32	22~100psi(0.15~0.7MPa)			
Temperature	-20~70°C				
Lubrication	Cylinder: Not required; Gripper jaws:Lubricate grease				
Cushion type	Bumper				
Max. frequency	60(c.p.m)				
Repeatability	±0.2mm				
Gripping force [Note1]	0.16N.m	0.55N.m	1.10N.m	2.30N.m	5.00N.m
Open or close angle	Open: -2°~ -5°		Close: 180° ± 2°		
Port size	M5×0.8				
Sensor switches [Note2]	CMSH\DMSH\EMSH				

[Note1] The gripping force is the value when the operating pressure is 75psi.


[Note2] Sensor switch should be ordered additionally.

### Example

#### Screw down

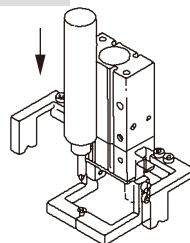

#### Clamping cable

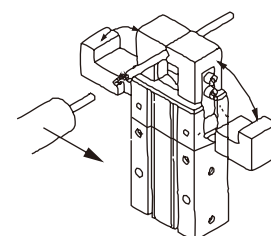

### How to select product

#### 1. Confirmation of effective gripping force


- 1.1) Though the coefficient of friction between the attachments and the workpiece is different, select a gripping force which is 10 to 20 times greater than the workpiece weight.
- 1.2) If high acceleration or impact forces are encountered during motion, a further margin of safety should be considered.

Example: When the workpiece weight is 0.05  
and the gripping point distance L is 30mm,  
the operating pressure will be 5kgf/cm<sup>2</sup>.






Effective gripping force = 0.05kg × 20 times × 9.8m/s<sup>2</sup> = more than 10N

Model selection: HFR16 is recommended. The effective gripping force is 17N,  
which is 20 times greater than the set value of gripping force.

- 1.3) The finger thrust is expressed as F, when both fingers and attachments are in full contact with the workpiece as shown in the figure below.

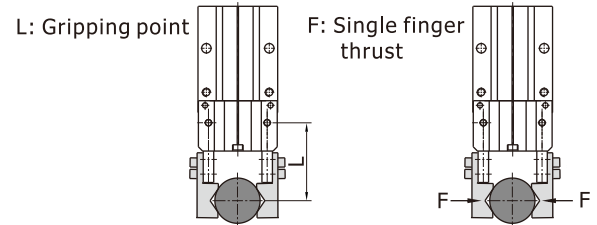


#### 2. Connection between gripping force and gripping point distance

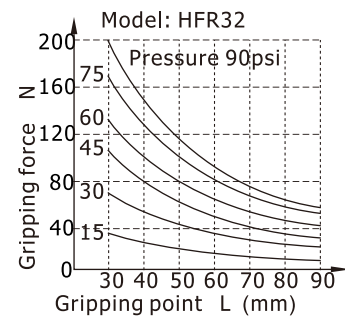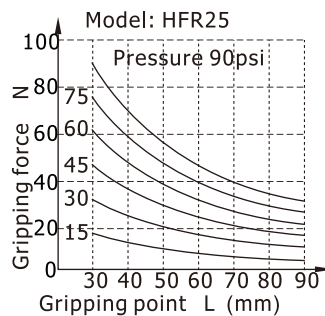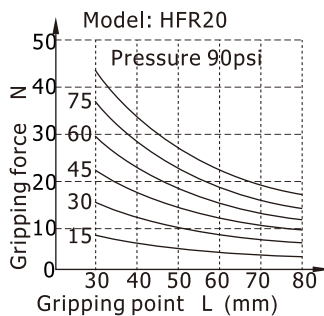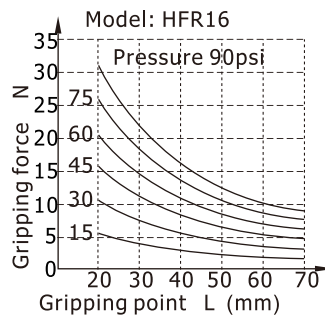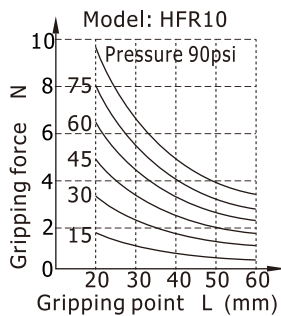

#### 3. The selection of the gripping point

- 3.1) Please select the gripping point within the limited field shown left. Over the limits, gripping jaws would be subjected to excessive torque loads, and lead to short life of the air gripper.
- 3.2) In the allowable range of gripping point, it is better to design for short and light fittings. If the fittings are long and heavy, the inertia force when the finger is open and close will become larger, and the performance of gripping jaw will be degraded, at the same time it will affect the life.

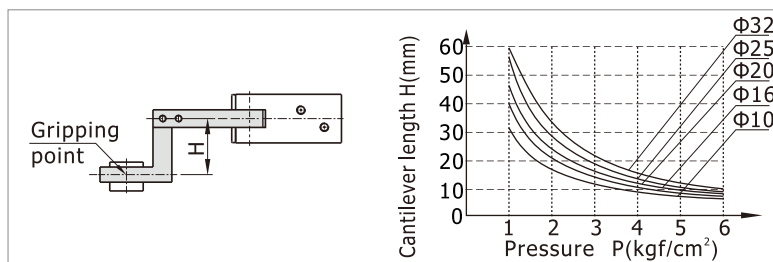

# Air gripper(180° open/close style)



## HFR Series

Bore size:  $\Phi 10$ ,  $\Phi 16$ ,  $\Phi 20$ ,  $\Phi 25$ ,  $\Phi 32$

### Installation and application

1. Due to the abrupt changes, the pressure is low, which will lead to the decrease of the gripping force and falling of the work-pieces. In order to avoid the harm to the human body and damage to the equipment, anti-dropping device must be equipped.
2. Don't use the air gripper under strong external force and impact force.
3. When install and fix the air gripper, avoid falling down, collision and damage.
4. When fixing the gripping jaw parts, don't twist the gripping jaw.
5. There are several kinds of installation method, and the torque of fastening screw must be within the prescribed moment range shown in the below chart. If the locking moment is too large, it will cause the dysfunctional. If the locking moment is too small, it will cause the position deviation and fall.


#### Tail installation type

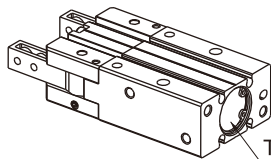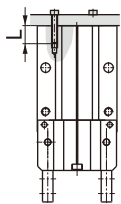

The bore of the tail is used for mounting and positioning


Bore size	The bolts type	Max. locking moment	Max. screwed depth	The aperture of the positioning bore	The depth of the positioning bore
10	M3×0.5	1.0N.m	6mm	$\Phi 11\text{mmH9}$	1.5mm
16	M4×0.7	2.0N.m	8mm	$\Phi 17\text{mmH9}$	1.5mm
20	M5×0.8	4.5N.m	10mm	$\Phi 21\text{mmH9}$	1.5mm
25	M6×1.0	7.0N.m	12mm	$\Phi 26\text{mmH9}$	1.5mm
32	M6×1.0	7.0N.m	14mm	$\Phi 34\text{mmH9}$	2.0mm

#### The installation of the front threaded hole

 


Bore size	The bolts type	Max. locking moment(Nm)	Max. screwed depth(mm)
10	M3×0.5	1.0	6
16	M4×0.7	2.0	8
20	M5×0.8	4.5	10
25	M6×1.0	7.0	12
32	M6×1.0	7.0	14

#### The installation of the front through hole

 


Bore size	The bolts type	Max. locking moment(Nm)
10	M3×0.5	1.0
16	M4×0.7	2.0
20	M5×0.8	4.5
25	M6×1.0	7.0
32	M6×1.0	7.0

#### Surface installation type

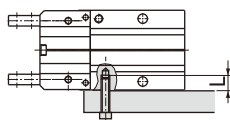

Bore size	The bolts type	Max. locking moment(Nm)	Max. screwed depth(mm)
10	M3×0.5	0.6	4
16	M4×0.7	1.5	5
20	M5×0.8	3.5	8
25	M6×1.0	6.0	10
32	M6×1.0	6.0	12

6. The installation method of the gripping jaw fittings. When install the gripping jaw fittings, you have to pay particular attention that you can only hold the gripping jaw by using spanner, and then lock the screws with allen wrench. Never clamp the body directly and then lock the screws, otherwise the parts will be easily damaged.
7. Other contents of installation and operation are the same with those of HFY. Refer to the "Installation and Operation" instruction of HFY.

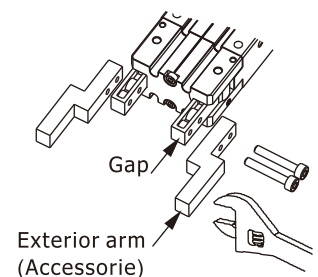

Bore size	The bolts type	Max. locking moment(Nm)
10	M3×0.5	0.6
16	M3×0.5	0.6
20	M4×0.7	0.8
25	M5×0.8	1.5
32	M6×1.0	3.0


# Air gripper(180° open/close style)



HFR Series


Bore size:  $\Phi 10$ ,  $\Phi 16$ ,  $\Phi 20$ ,  $\Phi 25$ ,  $\Phi 32$

## Inner structure

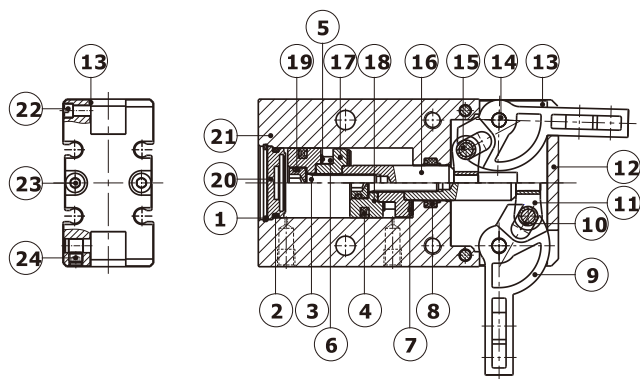

NO.	Item	NO.	Item
1	C clip	13	Sheet metal
2	O-ring	14	Pin
3	Countersink screw	15	Pin
4	Piston seal	16	Piston rod
5	Magnet washer	17	Magnet holder
6	Magnet	18	Piston
7	Bumper	19	O-ring
8	Rod packing	20	Back cover
9	Gripping jaws	21	Body
10	Pin sheath	22	Pin
11	Push block	23	Countersink screw
12	Front cover	24	Countersink screw

## Dimensions

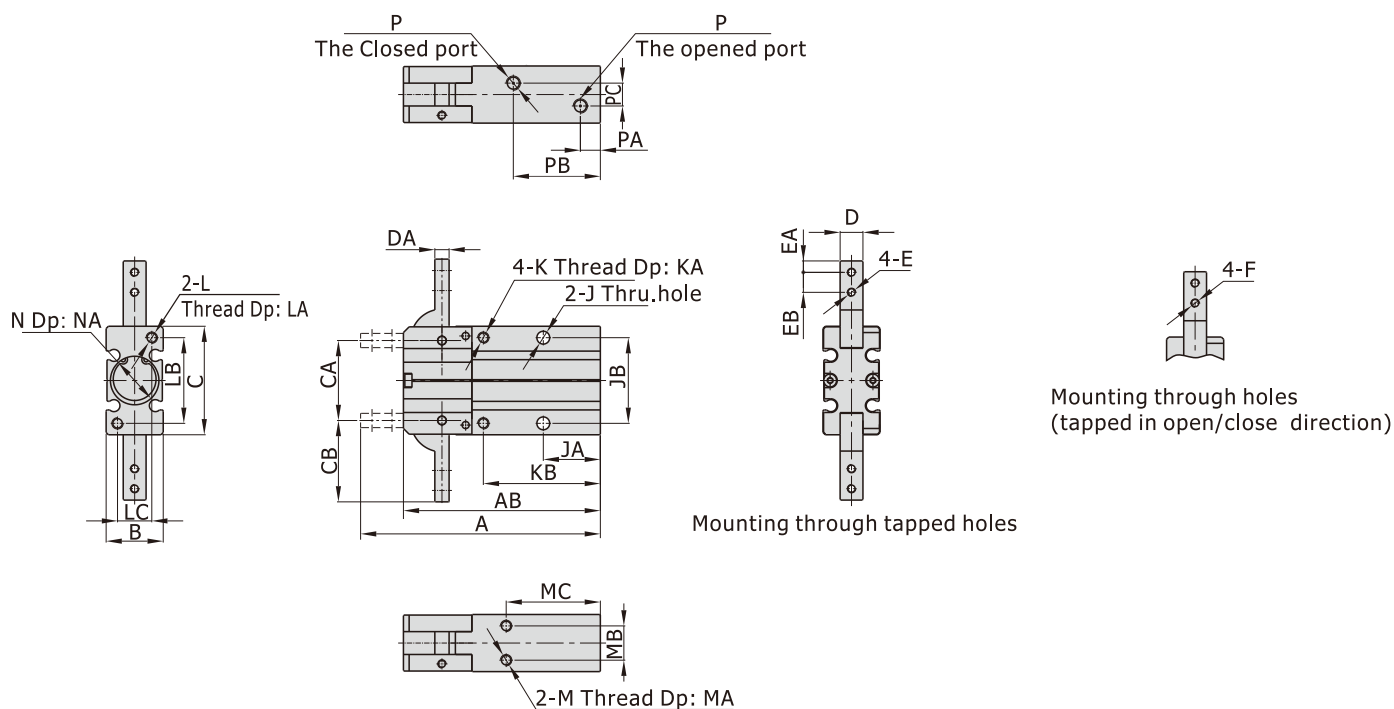

[Unit: mm]

Bore size\Item	A	AB	B	C	CA	CB	D	DA	E	F	EA	EB	J	JA	JB	K	KA
10	71	58	15	30	22	23.5	6	4	M3×0.5	$\Phi 3.3$	3	6	$\Phi 3.3$	18	24	M3×0.5	6
16	84	69	20	38	28	28.5	8	5	M3×0.5	$\Phi 3.3$	4	7	$\Phi 4.5$	20	30	M4×0.7	8
20	106	86	26	48	36	37	10	8	M4×0.7	$\Phi 4.5$	5	9	$\Phi 5.5$	25	36	M5×0.8	10
25	131	107	30	58	45	45	12	10	M5×0.8	$\Phi 5.5$	6	12	$\Phi 6.5$	30	42	M6×1.0	12
32	158.5	122	40	72	55	62.5	14	12	M6×1.0	$\Phi 6.5$	9	16	$\Phi 6.5$	35	46	M6×1.0	12

Bore size\Item	KB	L	LA	LB	LC	M	MA	MB	MC	N	NA	P	PA	PB	PC
10	35	M3×0.5	6	24	9	M3×0.5	4	9	30	$\Phi 11^{+0.05}_0$	1.5	M5×0.8	7	28.5	3
16	41	M4×0.7	8	30	12	M4×0.7	5	12	33	$\Phi 17^{+0.05}_0$	1.5	M5×0.8	7	30.5	8
20	50	M5×0.8	10	38	16	M5×0.8	8	14	42	$\Phi 21^{+0.05}_0$	1.5	M5×0.8	8	38.5	12
25	60	M6×1.0	12	46	18	M6×1.0	10	16	50	$\Phi 26^{+0.05}_0$	1.5	M5×0.8	8	48	14
32	64	M6×1.0	14	46	26	M6×1.0	12	26	59	$\Phi 34^{+0.05}_0$	2	M5×0.8	9	56	18

